

1. IN THE BOX

1x Wall Mount

4x Screws

4x Universal Wall Plugs

4x Adjustment Washers

4x Cable-ties

2x Security Screws

2. MARK THE HOLES

Place the wall mount in the desired position. Use the leveller to make sure the wall mount is positioned horizontally and mark the holes with a pen on the wall.

Please be sure your wall is properly constructed to carry the weight of the Libratone Lounge.



3. DRILL AND INSERT PLUGS


- Drill the four holes with an appropriate Ø8 drill.
- · Insert the plugs.

4. INSERT UPPER SCREWS

Insert the two upper screws.

>>>

2011-09-07_WallMount A4.indd 1 07/10/11 13.48

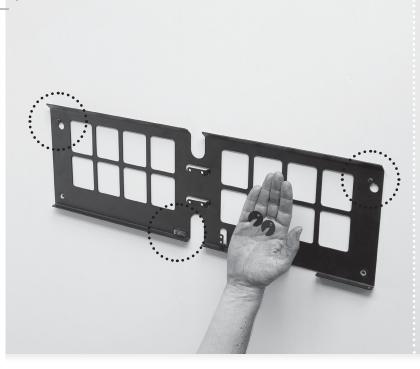




5. HANG, LEVEL AND TIGHTEN

- Hang the wall mount on the two screws.
- Place the washers between the wall mount and the upper two screws.
- Use the level to make sure the wall mount is horizontal and tighten the upper two screws.

6. INSERT LOWER SCREWS

- Insert the lower screws and the two remaining washers.
- Tighten the lower screws.

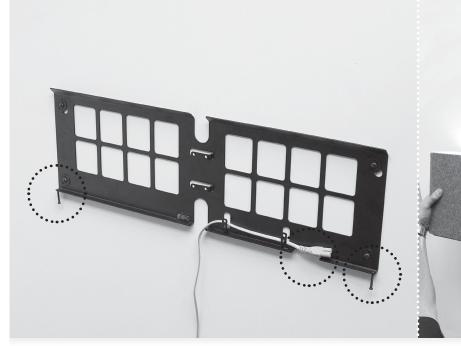



7. CABLE AND SECURITY SCREWS

- Place the power cable and other cables in the guides.
- Mount security screws in the bottom but leave them in the outer position.
- Use the cable-ties to hold the cables in place.

8. MOUNT LOUNGE

- · Lift and place the Lounge.
- Fasten security screws.

Enjoy

2011-09-07_WallMount A4.indd 2 07/10/11 13.48